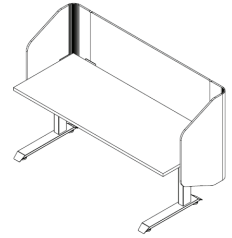
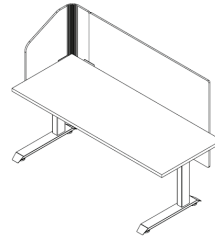
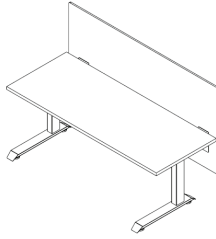
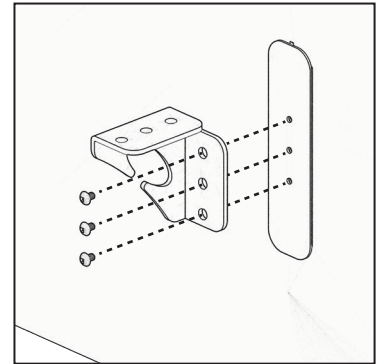
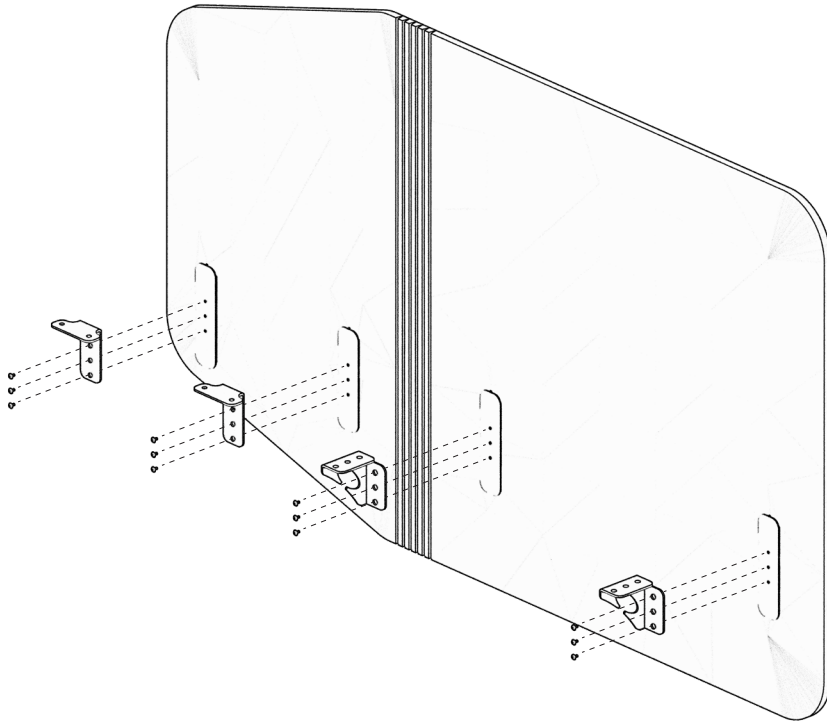


tayco

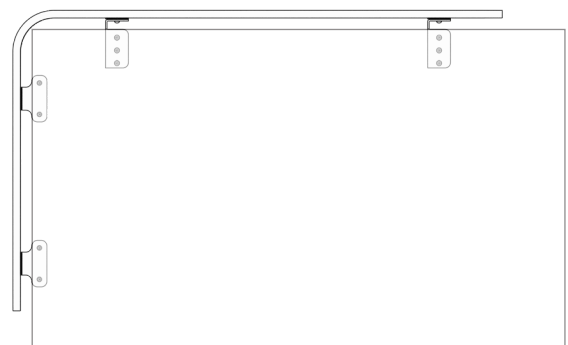
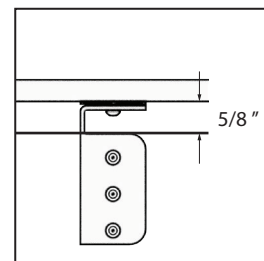
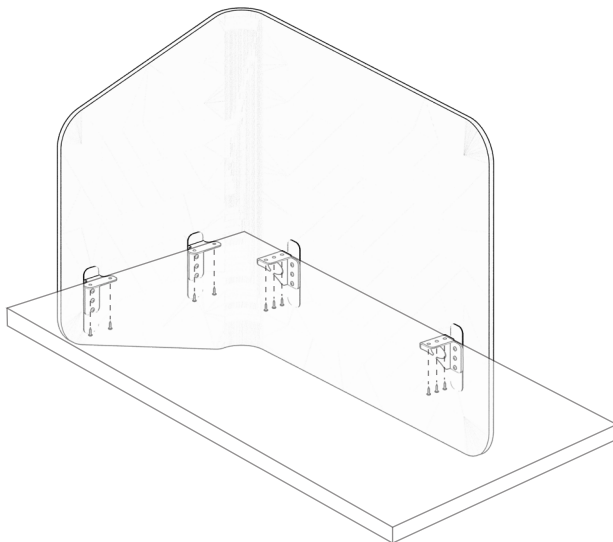
PET Privacy Panel - Desk Screen



1






2





tayco

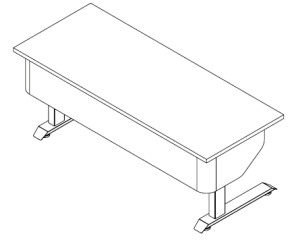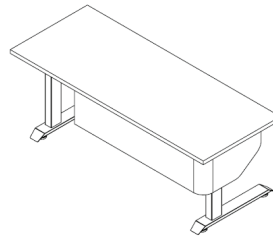
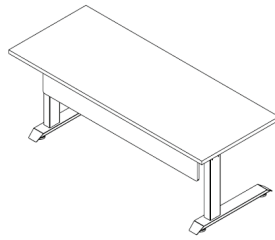
PET Privacy Panel - Modesty



1

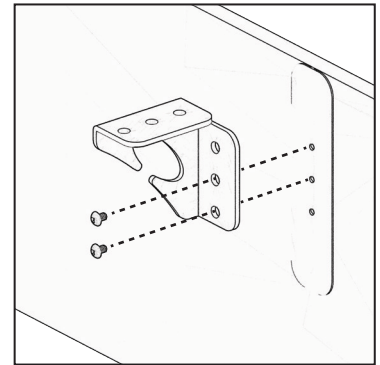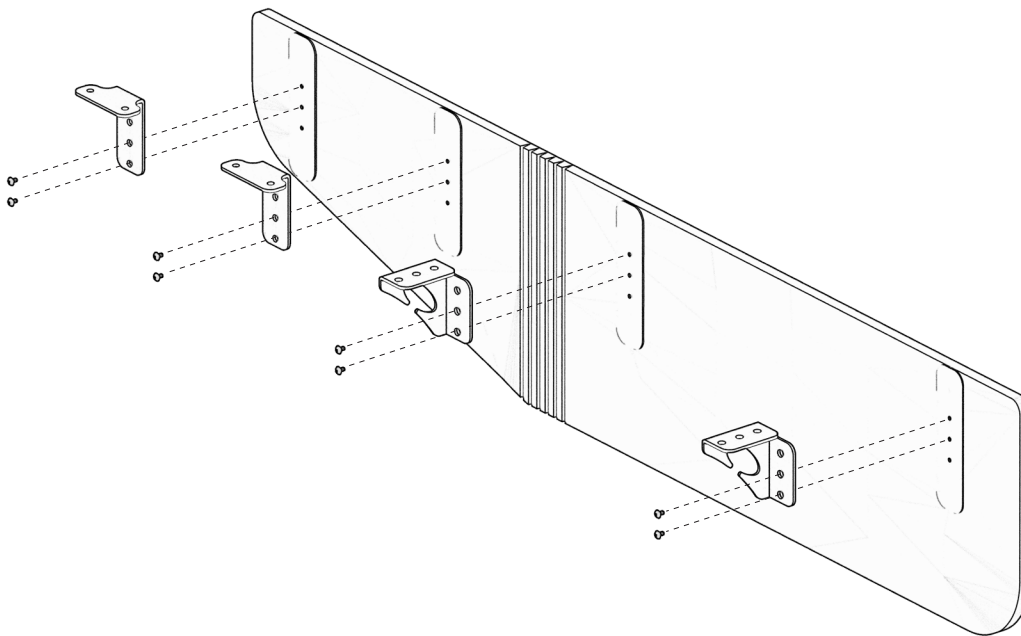


2

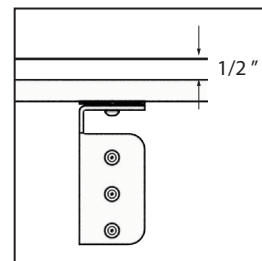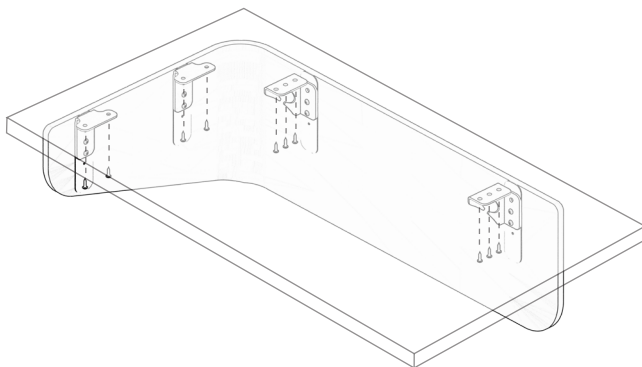


tayco®

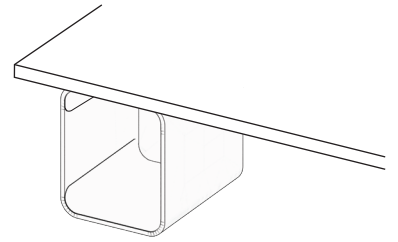
PET Bag Drop




1

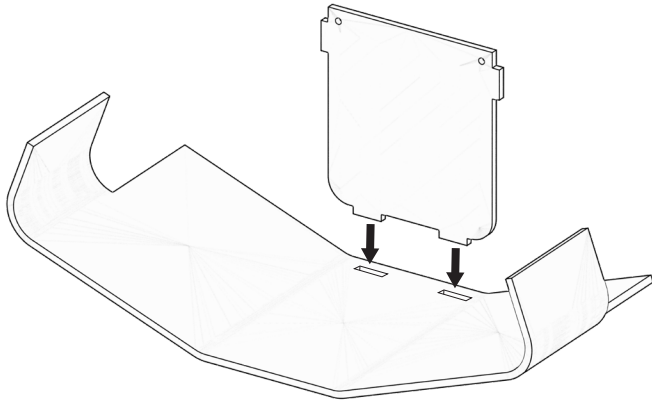


2

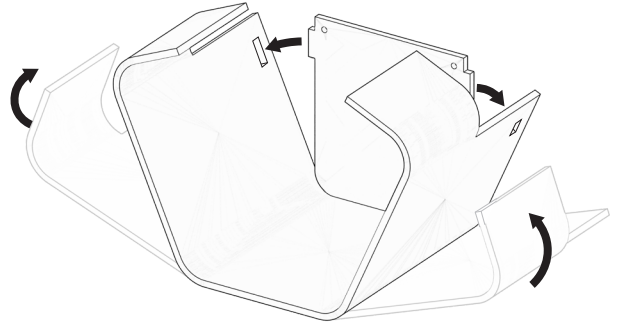


3

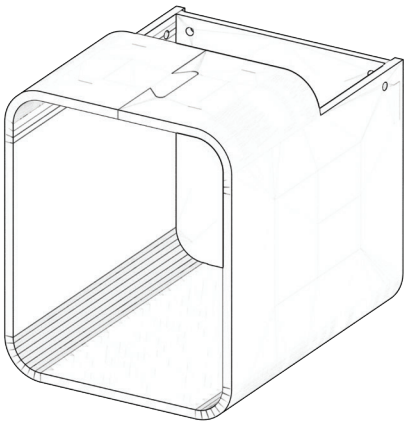


4

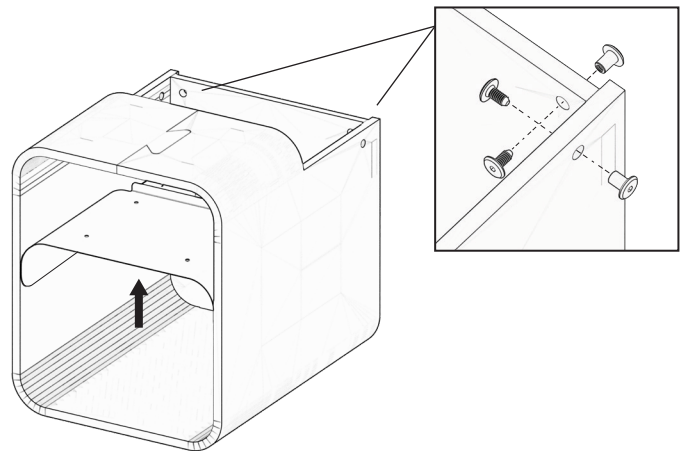

5

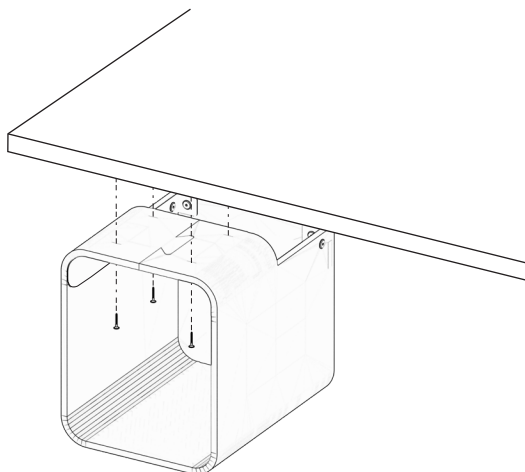


6

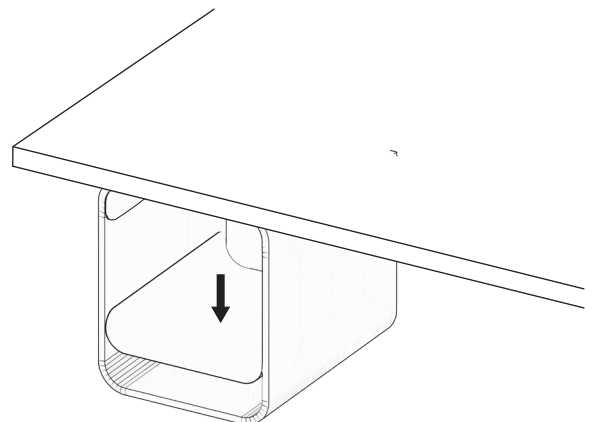


tayco®

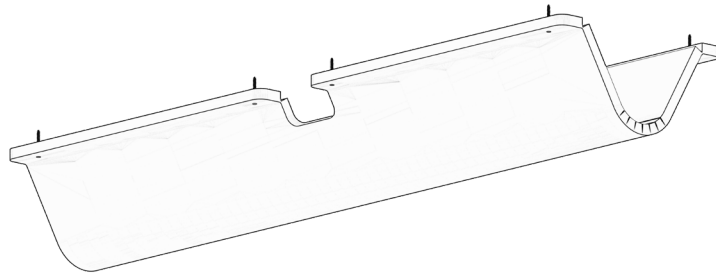
PET Cable Hammock



1

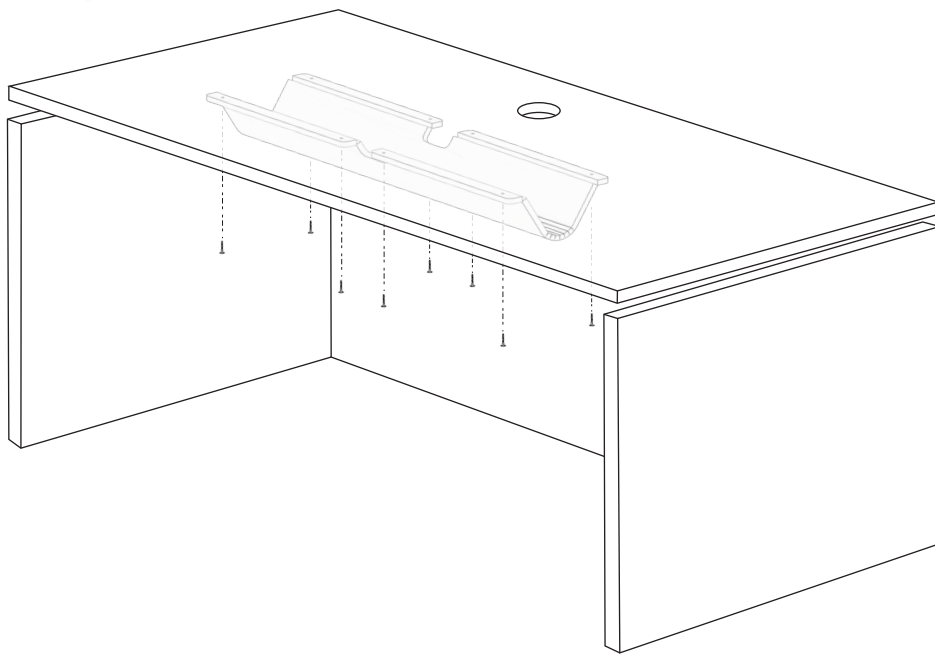


2

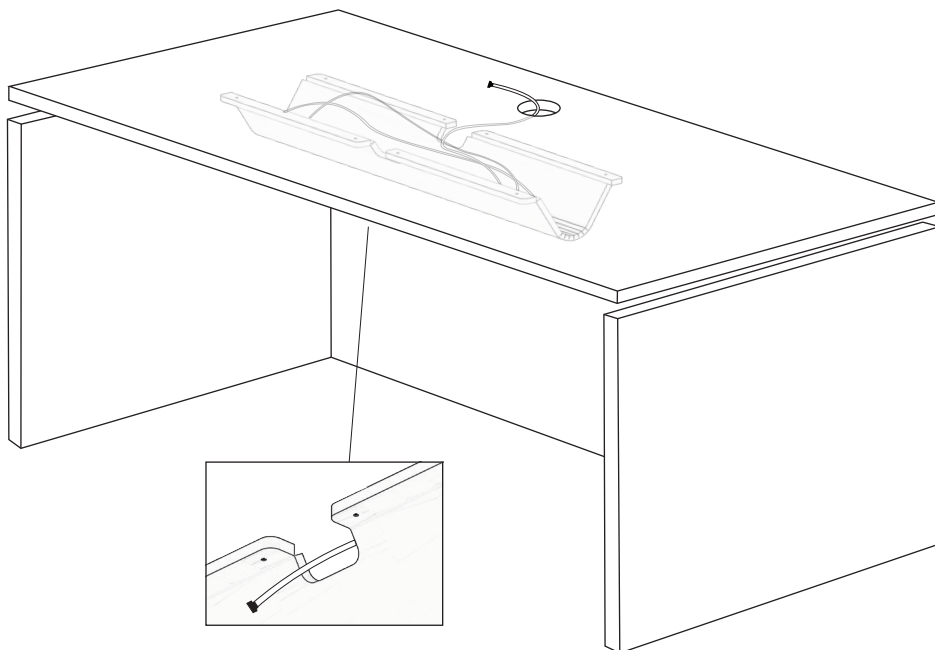

Echo Tables Installation Guide

For the installation of the Squircle and Super Ellipse Echo Tables, please follow the same procedure as shown for the Circle Echo Table.

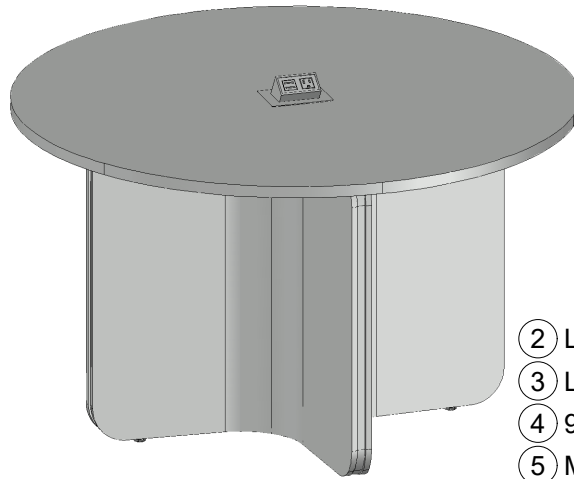1. Insert Laminate Base 1 into Laminate Base 2, as illustrated in Figure 1.
2. Securely fasten the Male Clips into the pre-drilled holes using #8 X 1/2" Flat Head Screws, as shown in Figure 2.
3. Attach the 90° Bracket using #10 x 11/16" Pan Head, Square Drive Screws, as demonstrated in Figure 3.



- ② Laminate Base 1
- ③ Laminate Base 2
- ④ 90° Bracket
- ⑤ Male Clip
- ⑥ #8 X 1/2" Flat Head Screw
- ⑦ #10 x 11/16" Pan Head Screw

Continued on the next page >>

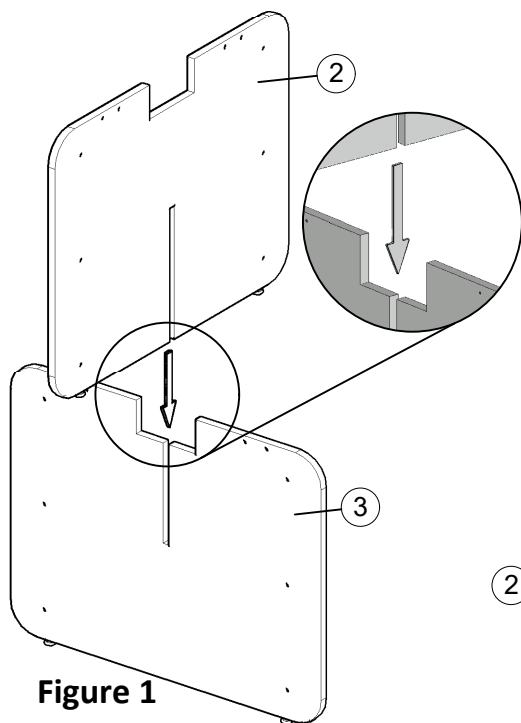


Figure 1

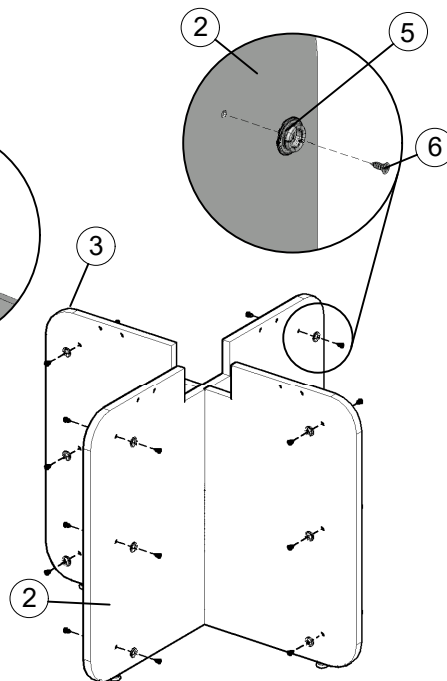


Figure 2

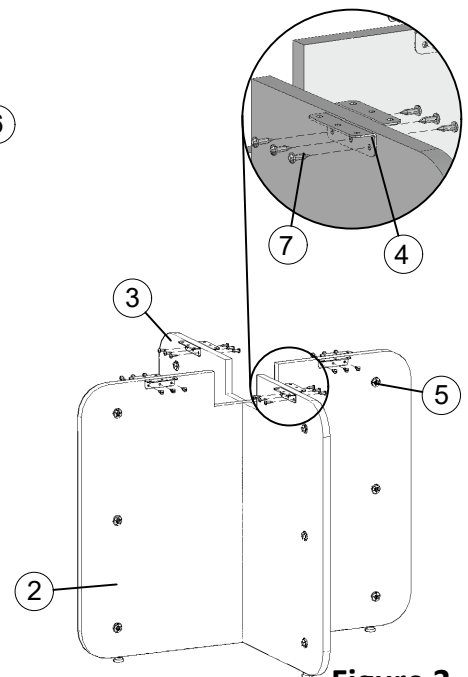








Figure 3

Tools & Hardware Needed

		8540-1479 	8540-0600 	90-3B6H-P114 	8540-0545 
Drill	Screw Bit	Male Clip	#8x1/2" Flat Head Screw	90° Bracket	#10 x 11/16" Pan Head Screw

Echo Table Base Installation Guide

4. Align the holes of the 90° Brackets with the pre-drilled holes on the underside of the Tabletop. Secure the Laminate Base 1 and 2 using #10 x 11/16" Pan Head, Square Drive Screws, as illustrated in Figure 4.
5. Bend the PET and align the Female Clips with the Male Clips attached to the laminates. Then, push the PET to connect the clips together, as shown in Figure 5.
6. Insert the power grommet into the designated hole, as shown in Figure 6.
7. Raise the table to an upright position. If needed, level and adjust the glides accordingly.

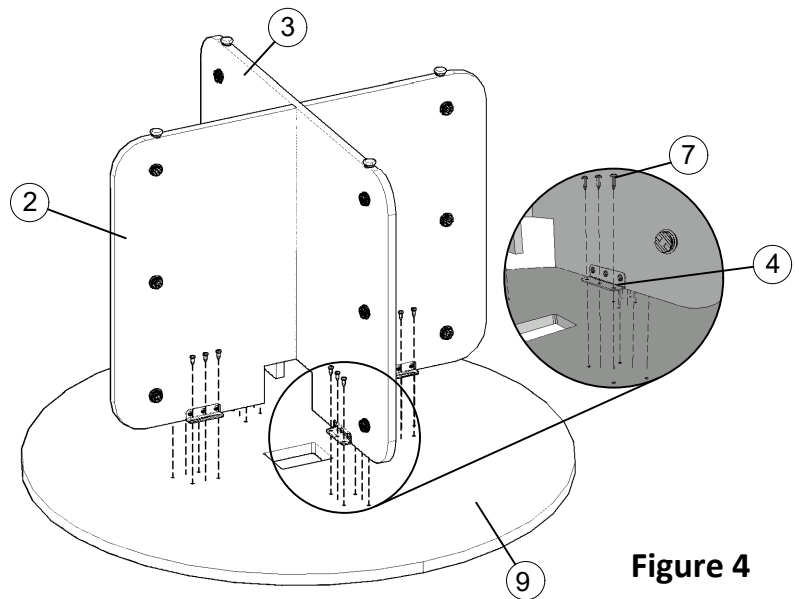


Figure 4

- ① PET
- ④ 90° Bracket
- ⑤ Male Clip
- ⑦ #10 x 11/16" Pan Head Screw
- ⑧ Female Clip
- ⑨ Tabletop
- ⑩ Power Grommet

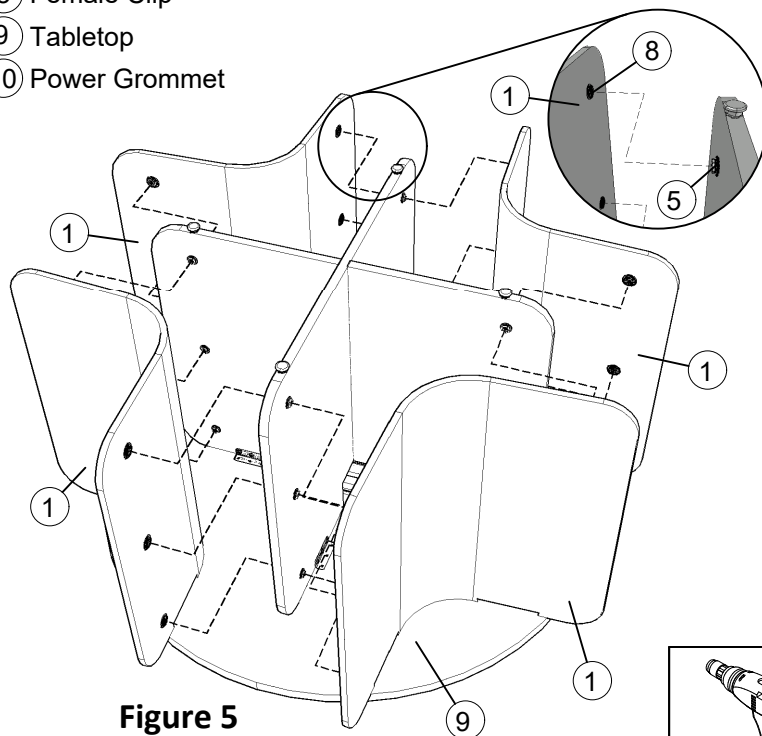


Figure 5

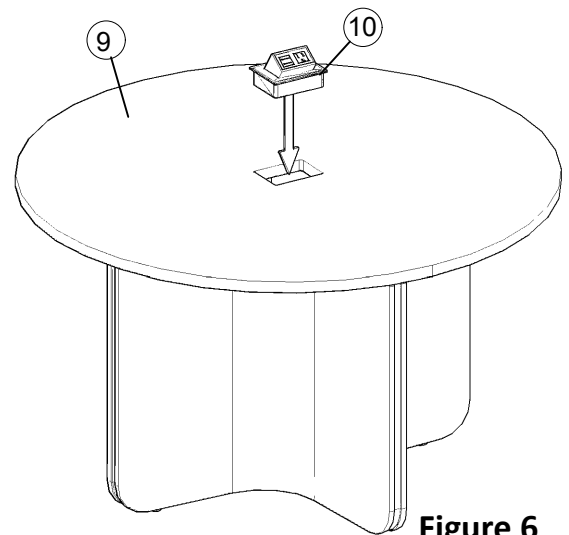






Figure 6

Tools & Hardware Needed

			
Drill	Robertson Bit	Female Clip	#10 x 11/16" Pan Head Screw