

M1 MESH CHAIR

Assembly Instructions

tayco®




PARTS LIST

- A - CHAIR BACKREST
- B - SILVER FRAME
- C - SEAT PAN
- D - ARMRESTS (X2)
- E - CASTERS (X4)
- F - SEAT BUSHING (X2)
- G - SEAT BRACKET (X2)
- H - M6X15 BOLTS (X2)
- I - 6X30 SCREWS (X6)
- J - M8X35 SCREWS (X2)
- K - FRAME CAPS (X2)


TOOL REQUIRED NOT INCLUDED

- PHILIPS #3
- 4 HEX & 6 HEX

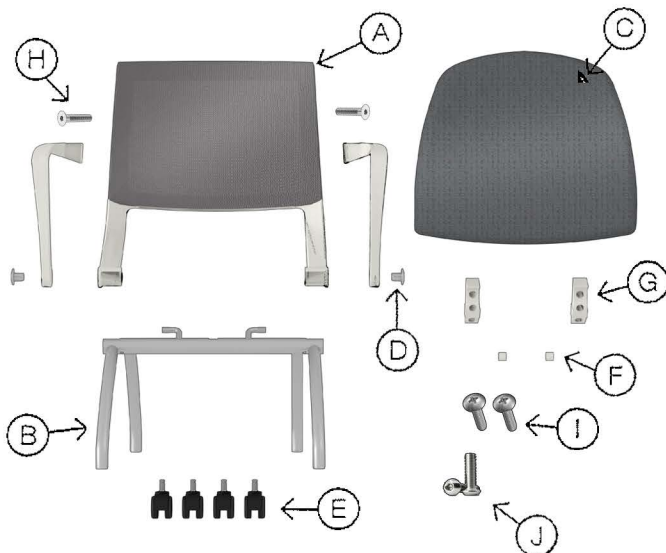

STEP 1:



SLIDE CHAIR
BACKREST (A)
ONTO SILVER
FRAME (B)

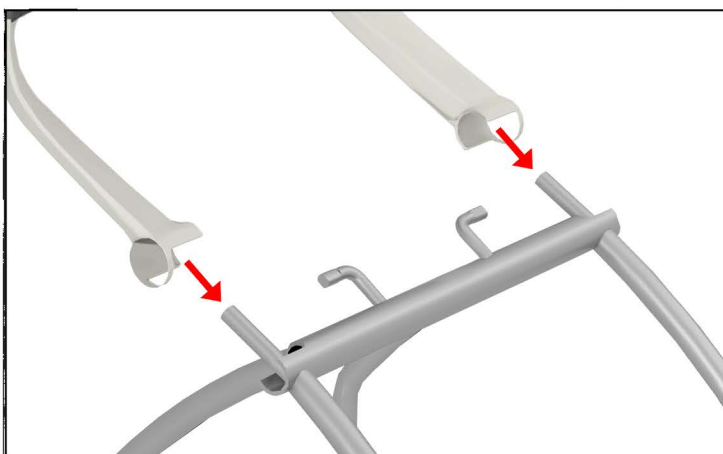

STEP 2:


STEP 2A: USE
6X15 SCREWS (H)
TO SECURE
ARMREST (D)
TO CHAIR
BACKREST (A)

STEP 2B: USE
M8X35 BOLTS
TO SECURE
ARMREST (D) TO
SILVER FRAME (B)

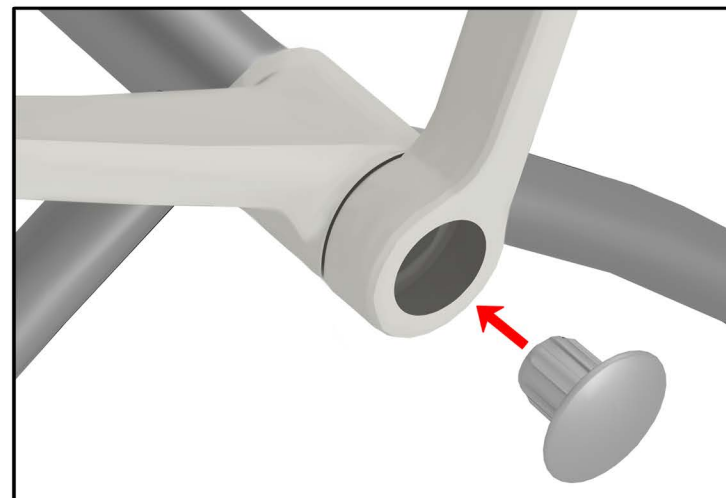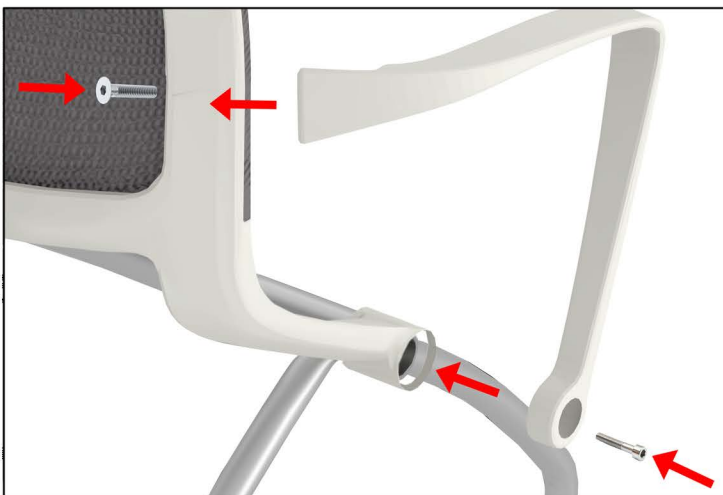


STEP 3:

ADD FRAME
CAPS (K) TO
COVER ARMREST
(D) AND SILVER
FRAME (B)
OPENING

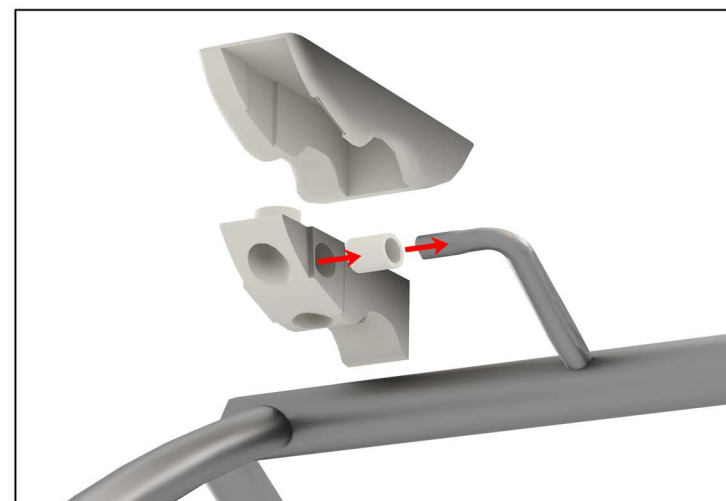

STEP 3:

ADD SEAT
BUSHING (F)
AND SEAT
BRACKET (G)
TO SILVER
FRAME (B)

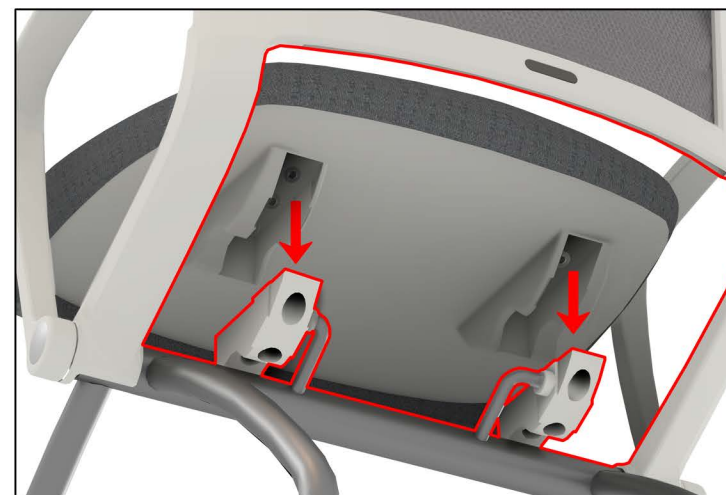

STEP 4:

ADD SEAT
PAN (C)
TO SEAT
BRACKET (G)

STEP 5:

USE THE
6X30 SCREWS (I)
TO SECURE
SEAT PAN (C)
TO SEAT
BRACKET (G)



STEP 6:

LIFT SEAT PAN (C)
UP TO REVEAL
AND ACCESS
HIDDEN SCREW



STEP 7:

ADD ALL 4
CASTERS (E) TO
SILVER FRAME (B)



M1 MESH CHAIR Assembly Instructions

tayco®